

SPECIAL NOTICE

The Morley Electro-Pik effects are produced by sensing the contact and breaking of contact between a metal guitar pick and the guitar strings, which are almost always connected to ground. A few guitars such as the new Gibson Les Pauls do not have the strings grounded and the Electro-Pik will not function until this is corrected. This is simply accomplished by connecting a short wire from the tail piece where the strings fasten, to the nearest ground on the guitar which most simply would be the nut of the jack where the guitar cord plugs into the guitar. Other ground points are the shafts of the tone and volume controls on the guitar.

