

THANK YOU!

For purchasing a Morley® pedal. You now own the best Wah pedal made!

Please take a few minutes to familiarize yourself with the features of your new pedal. With common sense handling, it should last for years. We know you will appreciate the rugged construction of your Morley®. Most of all, we hope you enjoy using it as much as we enjoyed building it.

OPERATION

The Volume Mode has been specially designed for gradual volume increases as the pedal is moved from off (toe up) to mid-travel (halfway between toe up and toe down). From mid-travel to full on (toe down) the volume increases faster. This audio taper combination gives you majestic volume swells - great for pedal steel effects - when using the full pedal travel (toe up or toe down) or subtle volume change with slight pedal movement. The pedal should be plugged into your signal chain directly after your instrument and before devices that add gain (such as preamps, distortion and overdrive effects). Plugging into the pedal after these type of effects may result in unwanted volume in the “off” position. **NOTE: How fast you move the pedal affects how the volume increases. The slower you move the pedal, the smoother the volume increases.**

The WAH mode is activated by pushing the WAH switch (a red LED will light when it’s “on”). With this new series, we’ve maintained the full, thick sound and wide bandwidth of previous Morley WAH pedals and added more reactive sound. Now you can make your guitar talk or sing similar to the sounds of Hendrix, Clapton and other greats of the 60’s and early 70’s.

CONNECTIONS

9V: Use 9 VDC 300 milliamp regulated adapter only.

IN: Input jack. Plug instrument into this jack using 1/4” guitar cable.

OUT: Connect amplifier to this jack using a 1/4” guitar cable.

NOTE: You’ll find cords fit very tightly into our input and output jacks. The tight fit helps prevent the cord from becoming accidentally unplugged from the pedal. Make sure the cords are completely plugged in for best results.

AC ADAPTER

Use a 9VDC 300 milliamp regulated adapter only. Using a non-regulated adapter could cause a low frequency hum in your amplifier and may damage the pedal.

BATTERY

The PWV is designed to use one 9 volt battery when not using an adapter. We suggest you use a good quality alkaline battery.

To prolong battery life, unplug your cord completely from the input jack when not using the pedal. When the pedal is not used for extended periods, we recommend you remove the battery from the pedal or replace it every six months to prevent leakage problems.

BATTERY REPLACEMENT

When the battery becomes weak, the overall wah will become weak and your signal may become slightly distorted.

Remove the battery door located on the bottom of the pedal (a short cord is attached to the door to help prevent loss) Once the door is off, the old battery can be removed from the battery snap and

new battery plugged in. Make sure the polarity (+/-) is correct before inserting the new battery. When you replace the battery door, you will notice it fits very tightly against the battery. This prevents the battery from rattling inside the pedal.

WARRANTY

All Morley® pedals are warranted for two years from date of purchase. To obtain warranty service contact the store where purchased, or call 1-800-639-4668.

SPECIFICATIONS


POWER: 9 Volt Battery or 9VDC 300 milliamp regulated adapter (center pin is negative)

CURRENT DRAW: 6.5 mA @ 9 VDC WAH mode
2.5 mA @ 9 VDC Volume mode

WEIGHT: 2.9 lb./ 1.32 kg

INDICATOR: Wah mode LED on
Bypass mode LED off

Here is a general recommendation for hooking up a WAH with other effects:

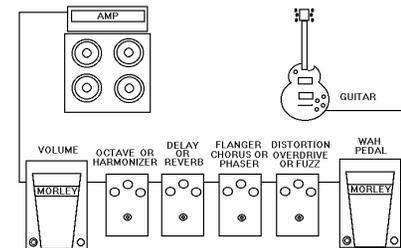

NOTE: This pedal is not intended for use through an effects loop (send and return).


FEATURES

- **WAH level Control:** This knob controls the overall output level of the WAH effect. It does not change the wah sweep or range
- **WAH On/Off Switch:** This switch turns the WAH effect “on” or “off”. In the “off” mode, the pedal functions as a volume pedal.
- **Electro-Optical:** The amount of light from the LED (Light Emitting Diode) that shines on the LDR (Light Dependent Resistor) is controlled by a shutter placed between the two devices. Our unique electro-optical design ensures smooth overall control of the WAH without unwanted noise typical with potentiometer (pot) controlled pedals.
- **LED WAH On/Off Indicator:** A red LED located above the WAH switch serves as on/off indicator. When the LED is on, WAH is engaged. When the LED is off, the pedal functions as a volume pedal.

MORLEY

185 Detroit Street, Cary, IL 60013 Phone: (847) 639-4646
Fax: (847) 639-4723 www.morleypedals.com

MORLEY®

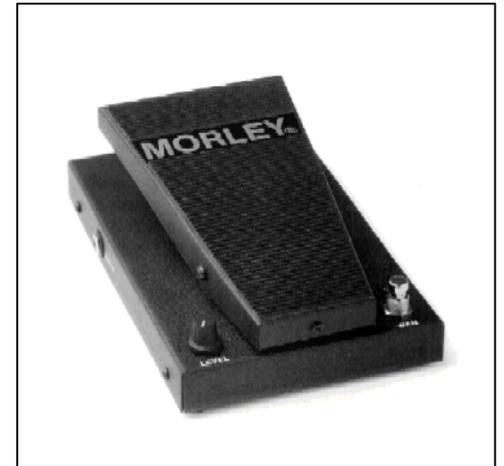

**Pro Series
WAH / Volume**

Model PWV

OWNER'S MANUAL